

MISSION 1000
MISSION 2000
MISSION 3000



Table of Contents

1. Important Safety Warning	3
1-1 Transportation	3
1-2 Preparation	3
1-3 Installation	3
1-4 Operation	4
1-5 Maintenance, service and faults	4
1-6 Symbols used in this guide	4
2. Installation and setup	5
2-1 Unpack checking	5
2-2 Real panel view	5
2-3 LCD control panel	6
2-4 Setup the UPS	6
3. Operations	7
3-1 Button operation	7
3-2 LCD display	8
3-3 UPS setting	10
3-4 Operating Mode Description	13
3-5 Operational Status and Mode(s)	14
3-6 Alarm or Fault reference code	14
4. Troubleshooting	15
5. Storage and Maintenance	16
6. Options	17
7. Specification	20

Thank you for purchasing this series UPS.

This series UPS is an intelligent, single phase in single phase out, high frequency online UPS designed by our R&D team who is with years of designing experiences on UPS. With excellent electrical performance, perfect intelligent monitoring and network functions, smart appearance, complying with EMC and safety standards, The UPS meets the world's advanced level.

Read this manual carefully before installation

This manual provides technical support to the operator of the equipment.

Contact the nearest hazardous waste disposal station when the products or components are discarded

All rights reserved.

The information in this document is subject to change without notice.

Made in P.R.C



1. Important Safety Warning

Important safety instructions – Save these instructions

Please comply with all warnings and operating instructions in this manual strictly. Save this manual properly and read carefully the following instructions before installing the unit. Do not operate this unit before reading through all safety information and operating instructions carefully

There exists dangerous voltage and high temperature inside the UPS. During the installation, operation and maintenance, please abide the local safety instructions and relative laws, otherwise it will result in personnel injury or equipment damage. Safety instructions in this manual act as a supplementary for the local safety instructions. Our company will not assume the liability that caused by disobeyingsafety instructions.

1-1 Transportation

- Please transport the UPS system only in the original package to protect against shock and impact.

1-2 Preparation

- Condensation may occur if the UPS system is moved directly from cold to warm environment. The UPS system must be absolutely dry before being installed. Please allow at least two hours for the UPS system to acclimate the environment.
- Do not install the UPS system near water or in moist environments.
- Do not install the UPS system where it would be exposed to direct sunlight or near heater.
- Do not block ventilation holes in the UPS housing.

1-3 Installation

- Do not connect appliances or devices which would overload the UPS system (e.g. laser printers) to the UPS output sockets.
- Place cables in such a way that no one can step on or trip over them.
- Do not connect domestic appliances such as hair dryers to UPS output sockets.
- The UPS can be operated by any individuals with no previous experience.
- Connect the UPS system only to an earthed shockproof outlet which must be easily accessible and close to the UPS system.
- Please use only VDE-tested, CE-marked mains cable (e.g. the mains cable of your computer) to connect the UPS system to the building wiring outlet (shockproof outlet).
- Please use only VDE-tested, CE-marked power cables to connect the loads to the UPS system.
- When installing the equipment, it should ensure that the sum of the leakage current of the UPS and the connected devices does not exceed 3.5mA.

1-4 Operation

- Do not disconnect the mains cable on the UPS system or the building wiring outlet (shockproof socket outlet) during operations since this would cancel the protective earthing of the UPS system and of all connected loads.
- The UPS system features its own, internal current source (batteries). The UPS output sockets or output terminals block may be electrically live even if the UPS system is not connected to the building wiring outlet.
- In order to fully disconnect the UPS system, first press the OFF/Enter button to disconnect the mains.
- Prevent no fluids or other foreign objects from inside of the UPS system.

1-5 Maintenance, service and faults

- The UPS system operates with hazardous voltages. Repairs may be carried out only by qualified maintenance personnel.
- **Caution** - risk of electric shock. Even after the unit is disconnected from the mains (building wiring outlet), components inside the UPS system are still connected to the battery and electrically live and dangerous.
- Before carrying out any kind of service and/or maintenance, disconnect the batteries and verify that no current is present and no hazardous voltage exists in the terminals of high capability capacitor such as BUS-capacitors.
- Only persons are adequately familiar with batteries and with the required precautionary measures may replace batteries and supervise operations. Unauthorized persons must be kept well away from the batteries.
- **Caution** - risk of electric shock. The battery circuit is not isolated from the input voltage. Hazardous voltages may occur between the battery terminals and the ground. Before touching, please verify that no voltage is present!
- Batteries may cause electric shock and have a high short-circuit current. Please take the precautionary measures specified below and any other measures necessary when working with batteries:
 - remove wristwatches, rings and other metal objects
 - use only tools with insulated grips and handles.
- When changing batteries, install the same number and same type of batteries.
- Do not attempt to dispose of batteries by burning them. This could cause battery explosion.
- Do not open or destroy batteries. Escaping electrolyte can cause injury to the skin and eyes. It may be toxic.
- Please replace the fuse only with the same type and amperage in order to avoid fire hazards.
- Do not dismantle the UPS system.

1-6 Symbols used in this guide



WARNING!

Risk of electric shock



CAUTION!

Read this information to avoid equipment damage

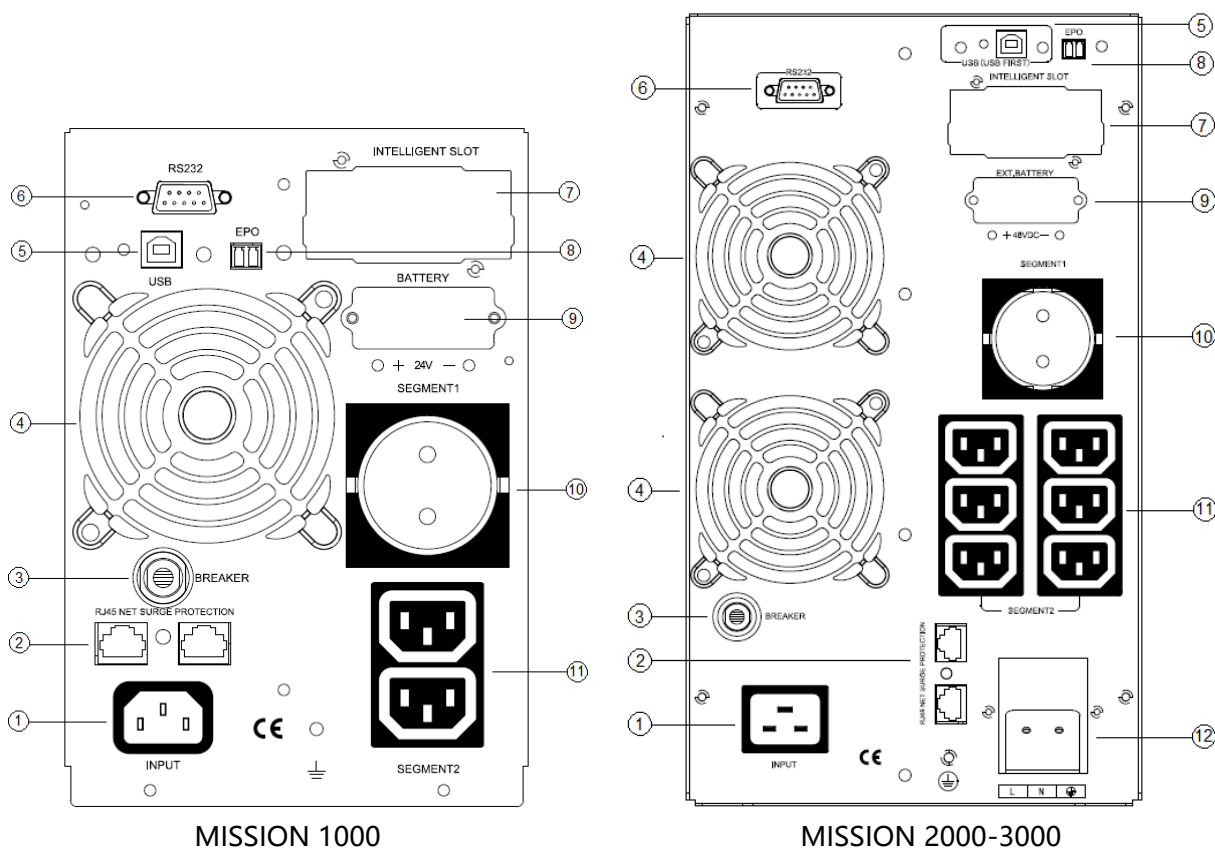
2. Installation and setup

NOTE: Before installation, please inspect the unit. Be sure that nothing inside the package is damaged. Please keep the original package in a safe place for future use.

2-1 Unpack checking


- Don't lean the UPS when moving it out from the packaging
- Check the appearance to see if the UPS is damaged or not during the transportation, do not switch on the UPS if any damage found. Please contact the dealer right away.
- Check the accessories according to the packing list and contact the dealer in case of missing parts.

2-2 Real panel view



- 1) Input socket
- 2) Net source protection
- 3) Input breaker
- 4) Fan
- 5) USB port
- 6) RS232 port
- 7) Intelligent slot
- 8) EPO
- 9) Battery socket
- 10) Output socket (Schuko)
- 11) Output socket (IEC)
- 12) Output terminal

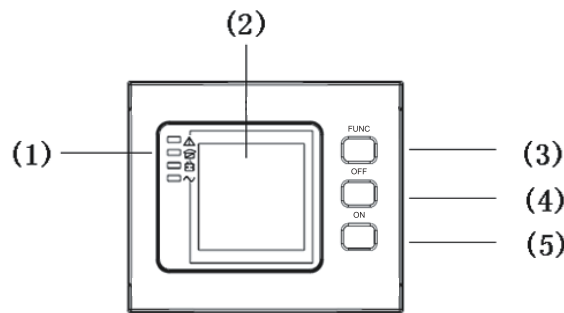2-3 LCD control panel



LCD control panel introduction

- (1) LED (from top to bottom: “alarm”, “bypass”, “battery”, “inverter”)
(2) LCD display (3) Select button & enter to next item (4) OFF button (5) ON button

2-4 Setup the UPS

Step 1: UPS input connection

Plug the UPS into a two-pole, three-wire, grounded receptacle only. Avoid using extension cords.

- For 208/220/230/240VAC models: The power cord is supplied in the UPS package.

Step 2: UPS output connection

- For socket-type outputs, simply connect devices to the outlets.
- For terminal-type input or outputs, please follow below steps for the wiring configuration:
 - a) Remove the small cover of the terminal block
 - b) Suggest using AWG14 or 2.1mm² power cords for 3KVA (208/220/230/240VAC models).
 - c) Upon completion of the wiring configuration, please check whether the wires are securely affixed.
 - d) Put the small cover back to the rear panel.

 
Step 3 Communication connection

Communication port:


USB port



RS-232 port



Intelligent slot

 

To allow for unattended UPS shutdown/start-up and status monitoring, connect the communication cable one end to the USB/RS-232 port and the other to the communication port of your PC. With the monitoring software installed, you can schedule UPS shutdown/start-up and monitor UPS status through PC.

The UPS is equipped with intelligent slot perfect for either SNMP or Relay card. When installing either SNMP or Relay card in the UPS, it will provide advanced communication and monitoring options.

NOTE: USB port and RS-232 port can't work at the same time.

Step 4: Turn on the UPS

Press the ON button on the front panel for two seconds to power on the UPS.

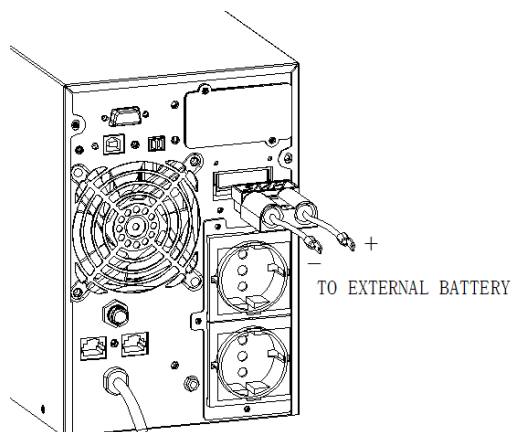
Note: The battery charges fully during the first five hours of normal operation. Do not expect full battery run capability during this initial charge period.

Step 5: Install software

For optimal computer system protection, install UPS monitoring software to fully configure UPS shutdown.

Step 6: External battery connection

If your UPS is not including batteries. Please connect external batteries as below chart.



3. Operations

3-1 Button operation





Button	Function
ON Button	<ul style="list-style-type: none">➤ Turn on the UPS: Press and hold ON button for at least 2 seconds to turn on the UPS.➤ Down key: Press this button to display next selection in UPS setting mode.➤ Exit setting mode: Press this button to confirm selection and exit setting mode when LCD display the last selection in UPS setting mode.
OFF Button	<ul style="list-style-type: none">➤ Turn off the UPS: Press and hold this button at least 2 seconds to turn off the UPS in battery mode. UPS will be in standby mode under power normal or transfer to Bypass mode if the Bypass enable setting by pressing this button.➤ Switch to bypass mode: When the main power is normal, press and hold this button for 2 seconds. Then UPS will enter to bypass mode. This action will be ineffective when the input voltage is out of acceptable range.➤ Up key: Press this button to display previous selection



	in UPS setting mode.
FUNC/Mute Button	<ul style="list-style-type: none"> ➤ Switch LCD message: Press this button to change the LCD message for input voltage, input frequency, battery voltage, output voltage and output frequency etc. ➤ Mute the alarm: When the UPS is on battery mode, press and hold this button for at least 2 seconds to disable or enable the alarm system. But it's not applied to the situations when warnings or errors occur. ➤ Switch to UPS self-test mode: Press and hold this button for 2 seconds to enter UPS self-testing while in AC mode.
OFF + FUNC Button	<ul style="list-style-type: none"> ➤ Setting mode: Press and hold this button for 5 seconds to enter UPS setting mode.

3-2 LCD display

There are 8 interfaces available in the LCD display

Item	Interface Description	Content Displayed
01	Input voltage	<p>The LCD display shows 'On-Line UPS' at the top. On the left, there is a status bar with four icons: a triangle with an exclamation mark (alarm), a battery icon, a square with a plus sign (input), and a tilde symbol (AC). The main display area shows '223 VAC' and '50.0 Hz' in large digits. Below the digits, the word 'Input' is displayed.</p>
02	Battery voltage	<p>The LCD display shows 'On-Line UPS' at the top. On the left, there is a status bar with four icons: a triangle with an exclamation mark (alarm), a battery icon, a square with a plus sign (input), and a tilde symbol (AC). The main display area shows '22.0 V' in large digits. Below the digits, the word 'Battery' is displayed.</p>

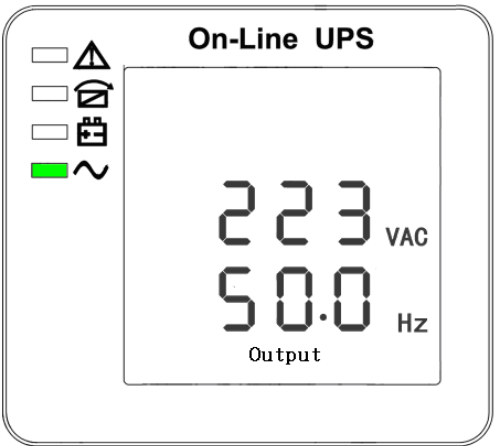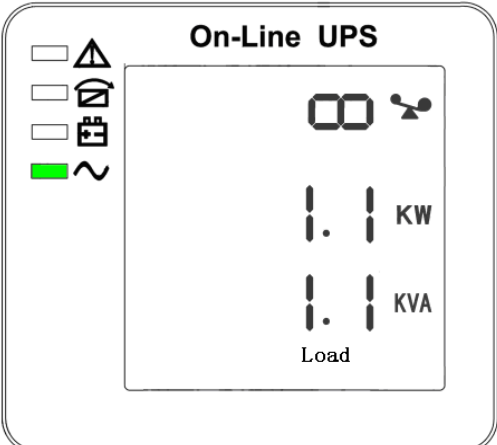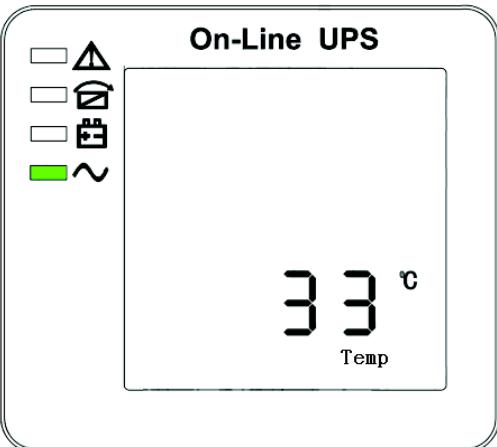03	Output voltage	
04	Load	
05	Temperature (EnvironmentTemperature)	
06	Firmware Version & UPS model.	



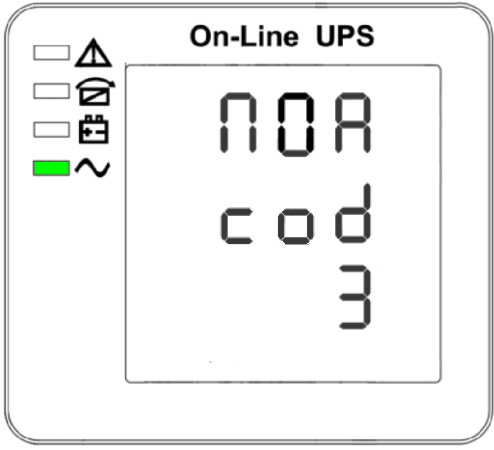
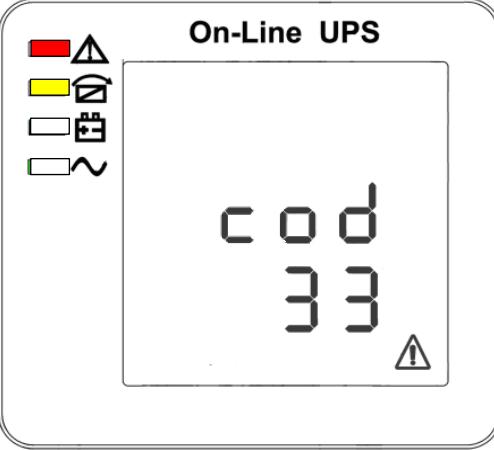
07	CODE (Operational status and mode)	
08	Alarm Code(Warming Message) All alarm codes are present when abnormal behavior(s) occur(s)	





3-3 UPS setting



The setting function is controlled by 3 buttons (Func, Off/up ▲, On/down ▼): Func + Off/up ▲ --- goes into the setting page, Func --- value adjustment; Off ▲ & On ▼ --- for choosing different pages.

After the UPS turn ON, press buttons Func & ▲ for 5 seconds and then goes into the setting interface page.

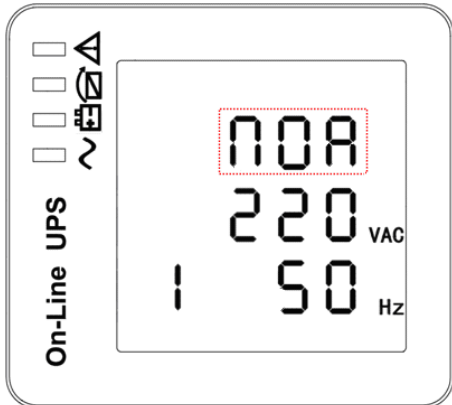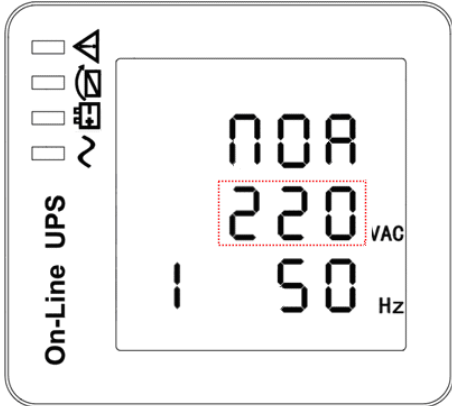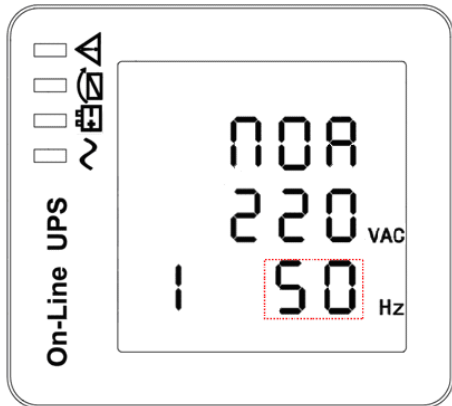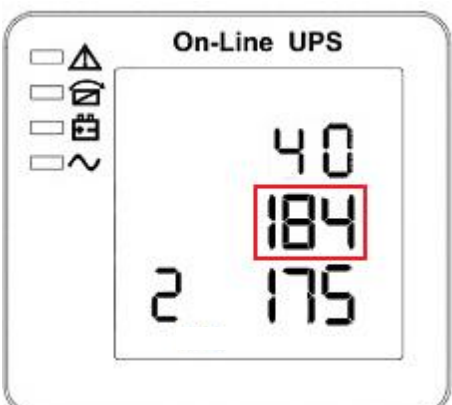Setting saving method: After setting the project parameters, press the down button ▼ until you enter the last page of the setting, and then press the down button ▼ to automatically exit the current setting mode, and it will take effect after powering off and saving in battery mode.

Item	Settings	Content display
1	<p>Mode setting</p> <p>Press FUNC button to change the setting (NOR or ECO or CF). Press OFF button ▲ to select the previous setting. Press ON button ▼ to select the next setting.</p>	
02	<p>Output voltage setting</p> <p>Press FUNC button to change the setting (208, 220, 230, 240). Press OFF button ▲ to select the previous setting. Press ON button ▼ to select the next setting.</p>	
03	<p>Frequency setting</p> <p>Press FUNC button to change the setting (50 or 60Hz). Press OFF button ▲ to select the previous setting. Press ON button ▼ to select the next setting.</p>	
04	<p>EOD point voltage setting (one power-off set point)</p> <p>Press FUNC button to change the setting (1.75/1.84/1.92) Default setting 184 (1.84V /cell) Press OFF button ▲ to select the previous setting. Press ON button ▼ to select the next setting;</p>	

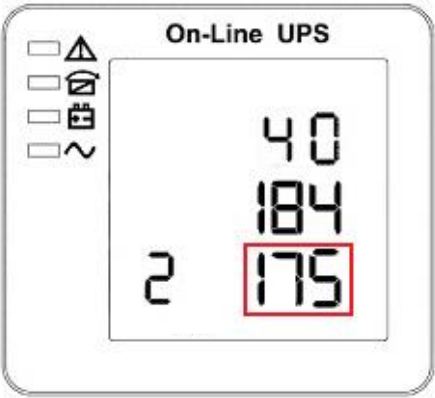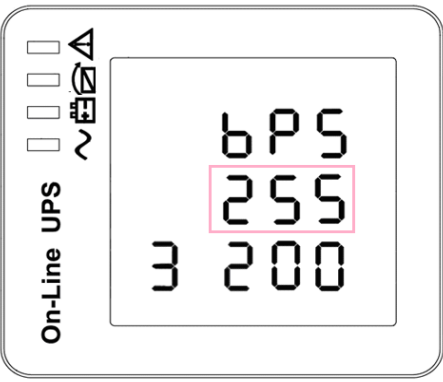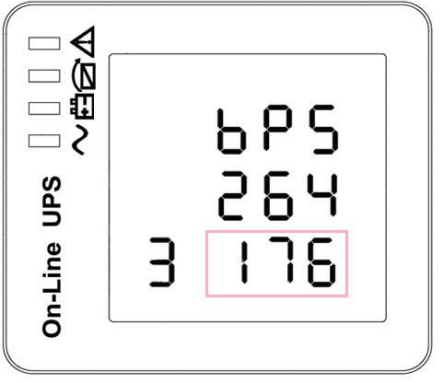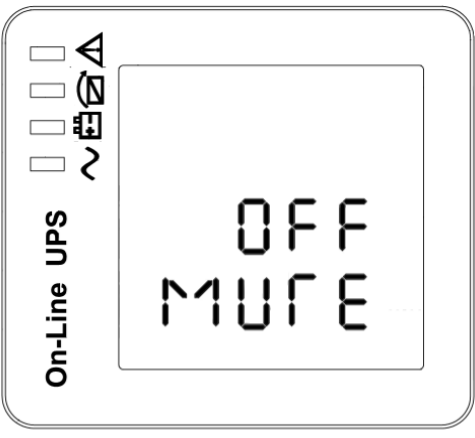05	<p>EOD voltage setting</p> <p>Press FUNC button to change the setting (160/167/175/180.)</p> <p>Default setting: 175(1.75V /cell)</p> <p>Press OFF button ▲ to select the previous setting.</p> <p>Press ON button ▼ to select the next setting.</p>	
06	<p>Bypass voltage upper limit setting</p> <p>Press FUNC button to change the setting (The bypass voltage upper limit range is 230-264Vac).</p> <p>Press OFF button ▲ to select the previous setting.</p> <p>Press ON button ▼ to select the next setting.</p>	
07	<p>Bypass voltage lower limit setting</p> <p>Press FUNC button to change the setting (The bypass voltage lower limit range is 176-220Vac).</p> <p>Press OFF button ▲ to select the previous setting.</p> <p>Press ON button ▼ to select the next setting.</p>	
08	<p>Mute setting</p> <p>Press FUNC button to change the setting (ON or OFF).</p> <p>Press OFF button ▲ to select the previous setting.</p> <p>Press ON button ▼ to select the next setting.</p>	

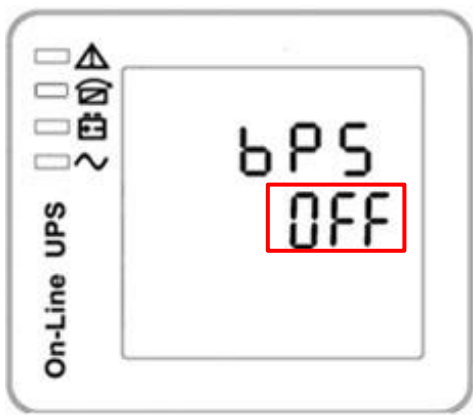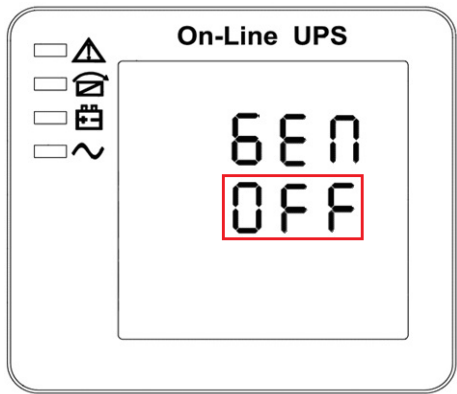09	<p>BYPASS enable/disable setting</p> <p>Press FUNC button to change the setting (ON or OFF). Press OFF button ▲ to select the previous setting. Press ON button ▼ to select the next setting.</p>	
10	<p>Generator mode setting</p> <p>Press FUNC button to change the setting (on or off) The factory default is: OFF, need to be manually set after the generator is manually connected; Press OFF button ▲ to select the previous setting. Press ON button ▼ to select the next setting</p>	

3-4 Operating Mode Description

Operating mode	Description	Led Display
Online mode	When the input voltage is within acceptable range, UPS will provide pure and stable AC power to output. The UPS will also charge the battery at online mode.	Inverter led light
ECO mode	Energy saving mode: When the input voltage is within voltage regulation range, UPS will bypass voltage to output for energy saving.	Bypass and Inverter led light
Battery mode	When the input voltage is beyond the acceptable range or power failure and alarm is sounding every 4 second, UPS will backup power from battery.	Battery and Inverter led light
Standby mode	UPS is powered off and no output supply power, but still can charge batteries.	All LEDs turn off
Bypass mode	When input voltage is within acceptable range but UPS is overload, UPS will enter bypass mode or bypass mode can be set by front panel.	Bypass led light

3-5 Operational Status and Mode(s)

item	Content Displayed
2	Standby Mode
3	No Output
4	Bypass Mode
5	Utility Mode
6	Battery Mode
7	Battery Self-diagnostics
8	Inverter is starting up
9	ECO Mode
10	EPO Mode
11	Maintenance Bypass Mode
12	Fault Mode
13	Generator Mode

3-6 Alarm or Fault reference code

Event log	UPS Alarm Warning	Buzzer	LED
1	Rectifier Fault	Beep continuously	Fault LED lit
2	Inverter fault(Including Inverter bridge is shorted)	Beep continuously	Fault LED lit
9	Fan fault	Beep continuously	Fault LED lit
12	Selftest fault	Beep continuously	Fault LED lit
13	Battery Charger fault	Beep continuously	Fault LED lit
15	DC Bus over voltage	Beep continuously	Fault LED lit
16	DC Bus below voltage	Beep continuously	Fault LED lit
17	DC bus unbalance	Beep continuously	Fault LED lit
18	Soft start failed	Beep continuously	Fault LED lit
19	Rectification model Over Temperature	Twice per second	Fault LED lit
20	Inverter model Over Temperature	Twice per second	Fault LED lit
26	Battery over voltage	Once per second	Fault LED blinking
27	Mains Input reverse	Once per second	Fault LED blinking
28	Bypass Input reverse	Once per second	Fault LED blinking
29	Output Short-circuit	Once per second	Fault LED blinking
30	Input current limit	Once per second	Fault LED blinking
31	Bypass over current	Once per second	BPS LED blinking
32	Overload	Once per second	INV or BPS LED blinking

33	No battery	Once per second	Battery LED blinking
34	Battery under voltage	Once per second	Battery LED blinking
35	Battery low pre-warning	Once per second	Battery LED blinking
36	Over load time out	Once per 2 seconds	Fault LED blinking
37	DC component over limit.	Once per 2 seconds	INV LED blinking
39	Mains volt. Abnormal	Once per 2 seconds	Battery LED lit
40	Mains freq. abnormal	Once per 2 seconds	Battery LED lit
41	Bypass Not Available		BPS LED blinking
42	Bypass out of tracking range		BPS LED blinking
45	EPO Enable	Beep continuously	Fault LED lit

4. Troubleshooting

If the UPS system does not operate correctly, please solve the problem by using the table below and the Trouble Shooting Chart.



Symptom	Possible cause	Remedy
No indication and alarm even though the mains is normal.	The AC input power is not connected well.	Check if input power cord firmly connected to the mains.
	The AC input is connected to the UPS output.	Plug AC input power cord to AC input correctly.
Alarm code is shown as "33" and battery led blinking.	The external or internal battery is incorrectly connected.	Check if all batteries are connected well.
Alarm code is shown as "26" and battery led blinking.	Battery voltage is too high or the charger is fault.	Contact your dealer.
Alarm code is shown as "34" and battery led blinking	Battery voltage is too low or the charger is fault.	Contact your dealer.
Alarm code is shown as "32" and INV or BYPASS led blinking.	UPS is overload	Remove excess loads from UPS output.
Alarm code is shown as "27&28" and FAULT led light.	Mains Input reverse& Bypass Input reverse	Check input L/N wiring Reverse connection

Alarm code is shown as "29" and FAULT led light.	The UPS shut down automatically because short circuit occurs on the UPS output.	Check output wiring and if connected devices are in short circuit status.
Alarm code is shown as "9" and FAULT led light.	Fan fault.	Contact your dealer.
Alarm code is shown as "01,02, 15,16,17,18"	A UPS internal fault has occurred.	Contact your dealer.
Battery backup time is shorter than nominal value	Batteries are not fully charged	Charge the batteries for at least 5 hours and then check capacity. If the problem still persists, consult your dealer.
	Batteries defect	Contact your dealer to replace the battery.

5. Storage and Maintenance

Operation

The UPS system contains no user-serviceable parts. If the battery service life (3~5 years at 25°C ambient temperature) has been exceeded, the batteries must be replaced. In this case, please contact your dealer.

Be sure to deliver the spent battery to a recycling facility or ship it to your dealer in the replacement battery packing material.

Storage

Before storing, charge the UPS 5 hours. Store the UPS covered and upright in a cool, dry location. During storage, recharge the battery in accordance with the following table:

Storage Temperature	Recharge Frequency	Charging Duration
-25°C - 40°C	Every 3 months	1-2 hours
40°C - 45°C	Every 2 months	1-2 hours

6. Options


SNMP card: internal SNMP (Options)

- ◆Loosen the 2 torquescrews (on each side of the card).
- ◆Carefully insert the SNMP card and lock the screws

The slot called SNMP supports the MEGAtec protocol. We advise that Net Agent II-3 port is also a tool to remotely monitor and manage any UPS system

NetAgent II-3 Ports supports the Modem Dial-in (PPP) function to enable the remote control via the internet when the network is unavailable.

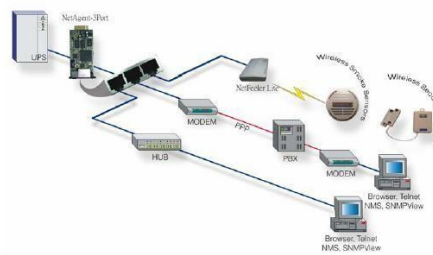In addition to the features of a standard NetAgent Mini, NetAgent II has the option to add Net Feeler Lite to detect temperature, humidity, smoke and security sensors. Thus, making NetAgent II a versatile management tool. NetAgent II also supports multiple languages and is set up for web-based auto language detection.



Typical topology of the UPS Network Management

Relay card (Options)

Mini dry contact card is used for providing the interface for UPS peripheral monitoring. The contact signals can reflect UPS running status. The card is connected to peripheral monitoring devices via terminal board to facilitate the effective monitoring of the real-time status of UPS and timely feedback the status to monitor when an abnormal situation occurs (such as UPS failure, mains interruption, UPS bypass and etc.). It is installed in the intelligent slot of the UPS.

The relay card includes 6 output ports and one input port. Please refer to the following table for detail.



Pins definition of connecting terminal on the board

Terminal No.	Terminal function	Terminal No.	Terminal function
1	Common source	9	Bypass alive NO
2	UPS on NO	10	Bypass alive NC
3	AC fail NO	11	UPS fail NO
4	AC fail NC	12	UPS fail NC
5	Batt low NO	CN4- 1	Remote shutdown
6	Batt low NC	CN4- 2	GND
7	UPS alarm NO		
8	UPS alarm NC		

Relaycard electrical parameter

	max	Type
Relaycardcontact	(Max Switched Voltage) AC:120V DC:24V	AC:120V
		DC:5~12V
	(Max Switched Current) AC:1A DC:1A	AC:1A
		DC:1A

Emergency Power-off (EPO) (Options)

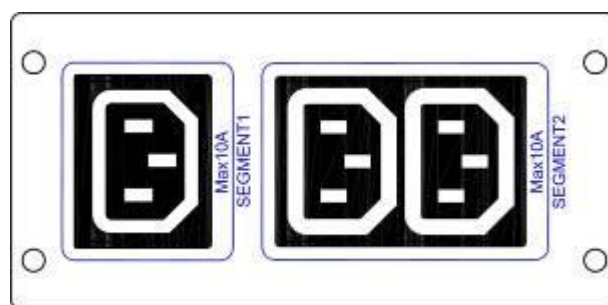
EPO is used to shut down the UPS from a distance. This feature can be used for shutting down the load and the UPS by thermal relay, for instance in the event of room overtemperature. When EPO is activated, the UPS shuts down the output and all its power converters immediately. The UPS remains on to alarm the fault.



NOTE Depending on user configuration, the pins must be shorted or opened to keep the UPS running. To restart the UPS, reconnect (re-open) the EPO connector pins and turn on the UPS manually. Maximum resistance in the shorted loop is 10 ohm. Always test the EPO function before applying your critical load to avoid accidental load loss. Leave the EPO connector installed onto the EPO port of the UPS even if the EPO function is not needed.

Load Segments (Options)

Load segments are sets of receptacles that can be controlled by power management software or through the display, providing an orderly shutdown and startup of your equipment. For example, during a power outage, you can keep critical equipment running while you turn off other equipment. This feature allows you to save battery power. Each UPS has two load segments:



Load Segment 1: The power shedding battery voltage of this segment can be set by LCD.

Load Segment 1: The power shedding battery end of discharge(EOD).

7.Specification

MODEL		MISSION1000	MISSION2000	MISSION3000
Phase		Single phase with ground		
Capacity (VA/Watts)		1000VA / 900W	2000VA / 1800W	3000VA / 2700W
INPUT				
Nominal voltage		208/220/230/240VAC		
Operating voltage range (Ambient Temp. <40°C)	Low line transfer	176Vac±5% @100%-50% load; 110Vac±5% @50%-0% load;		
	Low line comeback	186Vac±5% @100%-50% load; 120Vac±5% @50%-0% load;;		
	High line transfer	264Vac±5% @100%-50% load; 300Vac±5% @50%-0% load;		
	High line comeback	254Vac±5% @100%-50% load; 290Vac±5% @50%-0% load;		
Operating frequency range**		40-70Hz		
Power factor		0.99@100% load(Nominal Input Voltage)		
Bypass voltage range		Bypass high voltage point 230-264: setting the high voltage point in LCD from 230Vac to 264Vac. (Default: 264Vac) Bypass low voltage point 176-220: setting the low voltage point in LCD from 176Vac to 220Vac. (Default: 176Vac)		
Connection		IEC		
Generator input		Support		
OUTPUT				
Output voltage*		208/220/230/240Vac		
Power factor		0.9		
Voltage regulation		±1%		
Frequency	Line Mode (synchronized range)	46-54Hz or 56-64Hz		
	Batt. Mode	(50/60±0.1)Hz		
Crest factor		3:1		
Harmonic distortion (THDv)		≤3% THDwith linear load ≤5% THD with non linear load		
Waveform		Pure Sinewave		
Transfer time		Mains ↔ Battery = 0ms Inverter ↔ Bypass = 4ms Typical)		
Efficiency		88%(AC mode) 85%(DC mode)	90%(AC mode) 86%(DC mode)	90%(AC mode) 87%(DC mode)
Connection		2x IEC 1x Schuko	6x IEC 1x Schuko – 1x Terminal L/N + T	
BATTERY				
Battery Type		12V9AH		
Numbers		2	4	6
Input battery voltage		24Vdc	48Vdc	72Vdc
Backup time		10min (only refers to standard UPS), As for long backup UPS, the backup time is determined by the capacity of battery.		
Typical recharge time (standard model)		4 hours recover to 90% capacity (Typical)		
Charging voltage (V)		27.4 ±1%	54.7±1%	82.1 ±1%
Charge current (A)		1/2		

SYSTEM FEATURES			
Overload	Line Mode	105%~125%: UPS transfer to bypass after 1minute when the utility is normal 125%~130%: UPS transfer to bypass after 30 seconds when the utility is normal >130%: UPS transfer to bypass immediately when the utility is normal	
	Batt. Mode	105%~125%: UPS after 1minute shut down; 125%~130%: UPS after 10 seconds shut down; >130%: UPS immediately shut down;	
Short Circuit		Hold Whole System	
Overheat		Line Mode: Switch to Bypass; Backup Mode: Shut down UPS immediately	
Low battery voltage		Alarm and Switch off	
EPO (optional)		Shutdown UPS immediately	
Audible & Visual alarms		Line Failure, Battery Low, Overload, System Fault	
Comunication interface		USB (or RS232), SNMPcard (optional), Relay card (optional)	
ENVIRONMENTAL			
Operating temperature		0℃~40℃	
Storage temperature		-25℃~55℃	
Humidity range		20-90 % RH @ 0- 40℃ (non-condensing)	
Altitude		< 1500m	
Noise level		Less than 55dBA at 1 Meter	
PHYSICAL			
Dimension WxDxH (mm)		144*293* 209	191* 460* 337
Net Weight (kg)		9.1	19.5 24.5
STANDARDS			
Safety		IEC/EN62040-1,IEC/EN60950-1	
EMC		IEC/EN62040-2,IEC61000-4-2,IEC61000-4-3,IEC61000-4-4, IEC61000-4-5,IEC61000-4-6,IEC61000-4-8	

* Derate to 80% of capacity when the output voltage is adjusted to 208VAC

** Derate to 75% of capacity when the Input voltage frequency out of range(50/60±4Hz)

*** Product specifications are subject to change without further notice.

WARRANTY

Dear Customer,

Thank you for purchasing a NAICON product. We hope that you be satisfied.

If the product fails in warranty period, please contact your dealer or call +39 02 950031 or go to www.naicon.com/elsist. Before contacting your dealer or authorized service network, we recommend that you read the operating and maintenance manual carefully.

With this warranty, NAICON warrants the product to be free from defective in materials or workmanship for 2 years, as of the original delivery date.

If there are material or manufacturing defects during the warranty period, ELSIST affiliates, Authorized Service Centers or authorized resellers located in the UE region will repair or (at ELSIST discretion) replace the defective product or components under the terms and conditions below, without any charge for labor or spare parts costs. ELSIST reserves the right (in its sole discretion) to replace the components of defective products or low cost products with assembled parts or new or refurbished products.

Conditions.

1. This warranty will be valid only if the defective product is returned together with the sales invoice.

ELSIST reserves the right to refuse warranty service in the absence of such documents or if the information contained therein is incomplete or illegible.

 
2. This warranty does not cover the costs and / or any damages and / or defects resulting from any modifications or adjustments made to the product, without prior written permission from ELSIST, in order to adapt the product to local technical or safety standards in countries other than those for which the product was originally designed and manufactured.
3. This warranty will be void if the model or serial number indicated on the product has been modified, deleted, removed or otherwise illegible.
4. Are excluded from the warranty:
 - Periodic maintenance and repair or replacement of parts subject to normal wear and tear.
 - Any modification or modification to the product, without prior written permission from ELSIST to enhance performance than those described in the User and Maintenance Manual
 - All costs of technical staff support and any transport from the customer's address to Assistance Center and vice versa as well as all the risks involved.
 - Damages due to:
 - a) Improper use, including but not limited to: (a) the use of the product for any purpose other than the intended use or failure to observe the ELSIST instructions for correct use and maintenance of the product, (b) installation or use of the product not complying with the Technical or Safety standards in the country in which it is used.
 - b) Repairs by unauthorized personnel or by the Customer himself.
 - c) Accidental events, lightning, floods, fires, incorrect ventilation or other causes not attributable to ELSIST.
 - d) Defects of the equipment or equipment to which the product was connected.
5. This warranty does not affect the buyer's rights established by applicable national laws nor the Customer's rights to the reseller arising out of the sales contract.

Unless authorized by the manufacturer, reproduction of any part of this manual is prohibited. Our equipment, built with the utmost care and with selected components, is controlled by ELSIST Quality Services. However, if you notice any anomalies, please inform us by calling +39 02-950031 specifying serial number and model of the device, which are printed on the identification plate at the rear side of the UPS. ELSIST Assistance Service is also available to collect requests, comments, suggestions, if any.

In case of failure:

Contact our Customer Service Center at +39 02 95 0031, and verify the UPS malfunction.

If the products returned to NAICON were OPERATING or if they were delivered without our permission or for out-of-warranty products, they will be returned to the customer by charging a cost that will depend on the country where will be shipped.





Naicon

UNIT



Diloc



Elsist



Naicon srl Via il Caravaggio, 25 Trecella I 20060 Pozzuolo Martesana - Milano (Italy)
Tel. +39 02 95.003.1 Fax +39 02 95.003.313 www.naicon.com e-mail: naicon@naicon.com